




Installation Notice

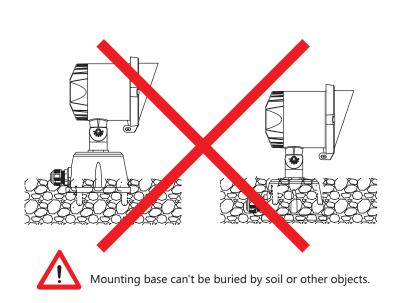

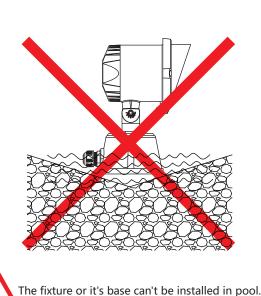

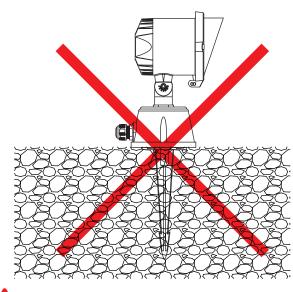




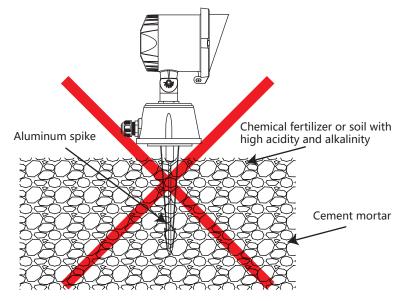





1: Aluminum spike can't touch cement paste directly in case of corrosion. 2: Aluminum spike can't be inserted into the soil with chemical fertilizer or other acid-base element.

- 1. Open package, take fixture and stake out.
- 2. Use cross screwdriver to install the stake to bottom of mounting base with screws.
- 3. Install the assembly on soil surface or lawn by driving the sharp end of the stake into ground.
- 4. Base should be kept 50mm higher than soil or lawn surface in case of burying caused by rain.

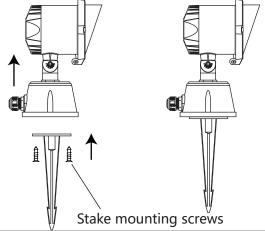


- 1. Suitable for lamp screw and ground socket screw.
- 2. Simply connect and tighten directly.




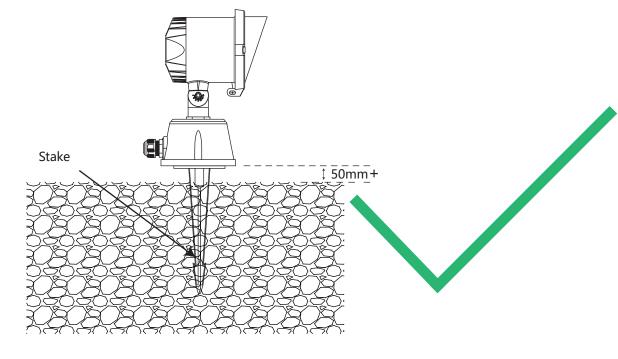



The mounting base must be 50mm higher than ground level in case the base gets buried by soil when rainy.


Plastic spike will be suggested to the soil with acid-base element.

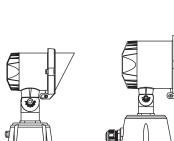





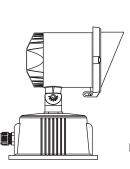


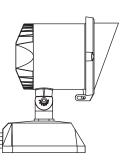

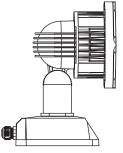



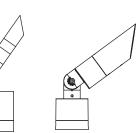





Same with similar products